

SINAMICS

S120 Control Units and additional system components

Manual

Preface

System overview

1

Control Units

2

Additional system
components

3

Encoder system connection

4

Cabinet design and
electromagnetic compatibility
(EMC)

5

Appendix A

A

Appendix B

B

4.4 Sensor Module Cabinet-Mounted SMC20

4.4.1 Description

The Sensor Module Cabinet-Mounted SMC20 evaluates encoder signals and transmits the speed, actual position value, rotor position and, if necessary, the motor temperature and reference point via DRIVE-CLiQ to the Control Unit.

The SMC20 is used to evaluate encoder signals from incremental encoders with SIN/COS (1 Vpp) or absolute encoders with EnDat 2.1 or SSI.

4.4.2 Safety information



WARNING

The ventilation spaces of 50 mm above and below the component must be observed.

NOTICE

Only one encoder system may be connected per Sensor Module.

Note

There must be no electrical connection between the encoder system housing and the signal cables, or the encoder system electronics. If this is not carefully observed, under certain circumstances the system will not be able to reach the required interference immunity level (there is then a danger of equalization currents flowing through the electronics ground).



CAUTION

Connecting cables to temperature sensors must always be installed with shielding. The cable shield must be connected to the ground potential at both ends over a large surface area. Temperature sensor cables that are routed together with the motor cable must be twisted in pairs and shielded separately.

4.4.3 Interface description

4.4.3.1 Overview

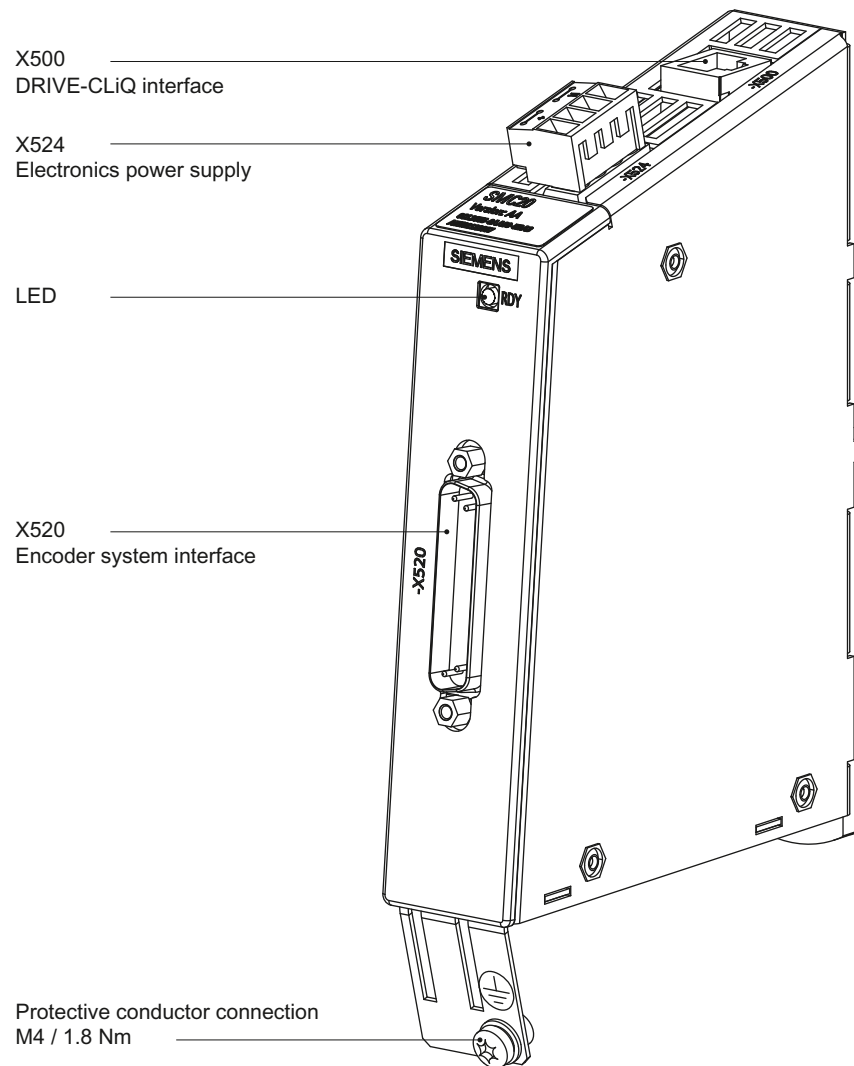



Figure 4-8 Interface description of the SMC20

4.4.3.2 X500 DRIVE-CLiQ interface

Table 4- 8 X500 DRIVE-CLiQ interface


	Pin	Signal name	Technical specifications
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	Reserved, do not use	
	B	M (0 V)	Electronics ground
	Connector type	RJ45 socket	

The blanking cover for the DRIVE-CLiQ port is included in the scope of delivery.

Blanking covers (50 pieces) Order number: 6SL3066-4CA00-0AA0


4.4.3.3 X520 encoder system interface

Table 4- 9 X520 encoder system interface

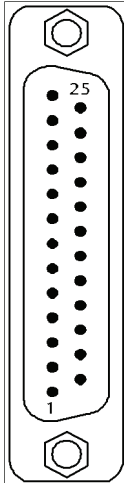	Pin	Signal name	Technical specifications
	1	P encoder	Encoder power supply
	2	M encoder	Ground for encoder power supply
	3	A	Incremental signal A
	4	A*	Inverse incremental signal A
	5	Ground	Ground (for internal shield)
	6	B	Incremental signal B
	7	B*	Inverse incremental signal B
	8	Ground	Ground (for internal shield)
	9	Reserved, do not use	
	10	Clock	Clock, EnDat interface, SSI clock
	11	Reserved, do not use	
	12	Clock*	Inverted clock, EnDat interface, inverted SSI clock
	13	+Temp	Motor temperature measurement KTY84-1C130 (KTY+) Temperature sensor KTY84-1C130 / PTC
	14	P sense	Sense input encoder power supply
	15	Data	Data, EnDat interface, SSI data
	16	M sense	Ground sense input encoder power supply
	17	R	Reference signal R
	18	R*	Inverse reference signal R
	19	C	Absolute track signal C
	20	C*	Inverse absolute track signal C
	21	D	Absolute track signal D
	22	D*	Inverse absolute track signal D
	23	Data*	Inverse data, EnDat interface, Inverse SSI data
	24	Ground	Ground (for internal shield)
25	-Temp	Motor temperature measurement KTY84-1C130 (KTY-) Temperature sensor KTY84-1C130 / PTC	
Connector type:	25-pin SUB D connector		
Measuring current via temperature sensor connection: 2 mA			

NOTICE

The KTY temperature sensor must be connected with the correct polarity
If the sensor is connected with the incorrect polarity, it cannot detect if a motor overheats.

**DANGER**


Risk of electric shock!

Only temperature sensors that meet the safety isolation specifications contained in EN 61800-5-1 may be connected to terminals "+Temp" and "-Temp". If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), a Sensor Module External (SME120 or SME125) or Terminal Module TM120 must be used.

If these instructions are not complied with, there is a risk of electric shock!

4.4.3.4 X524 electronics power supply

Table 4- 10 X524 electronics power supply

	Terminal	Function	Technical specifications
	+	Electronics power supply	Voltage: 24 V (20.4 V – 28.8 V) Current consumption: Max. 0.35 A Maximum current via jumper in connector: 20 A
	+	Electronics power supply	
	M	Electronics ground	
	M	Electronics ground	
Max. connectable cross-section: 2.5 mm² Type: Screw terminal 2 (see Appendix A)			

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

4.4.4 Connection example

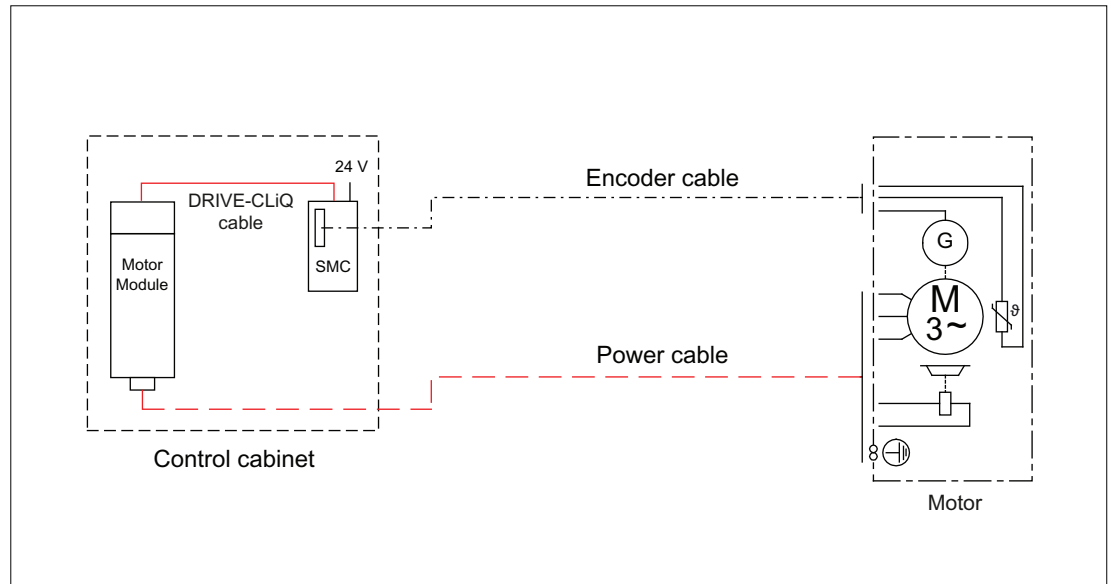


Figure 4-9 Connection of an encoder system via a Sensor Module Cabinet-Mounted (SMC) for a motor without a DRIVE-CLiQ interface

4.4.5 Meaning of the LED

Table 4- 11 Meaning of LEDs on the Sensor Module Cabinet-Mounted SMC20

LED	Color	Status	Description, cause	Remedy
RDY READY	-	Off	Electronics power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	At least one fault is present in this component. Note: The LED is activated regardless of whether the corresponding messages have been reconfigured.	Remedy and acknowledge fault
	Green/red	0.5 Hz flashing light	Firmware is being downloaded.	–
		2 Hz flashing light	Firmware download is complete. Wait for POWER ON	Carry out a POWER ON
	Green/orange or Red/orange	Flashing light	Component recognition via LED is activated (p0144). Note: Both options depend on the LED status when component recognition is activated via p0144 = 1.	–

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150, List Manual (LH1)

4.4.6 Dimension drawing

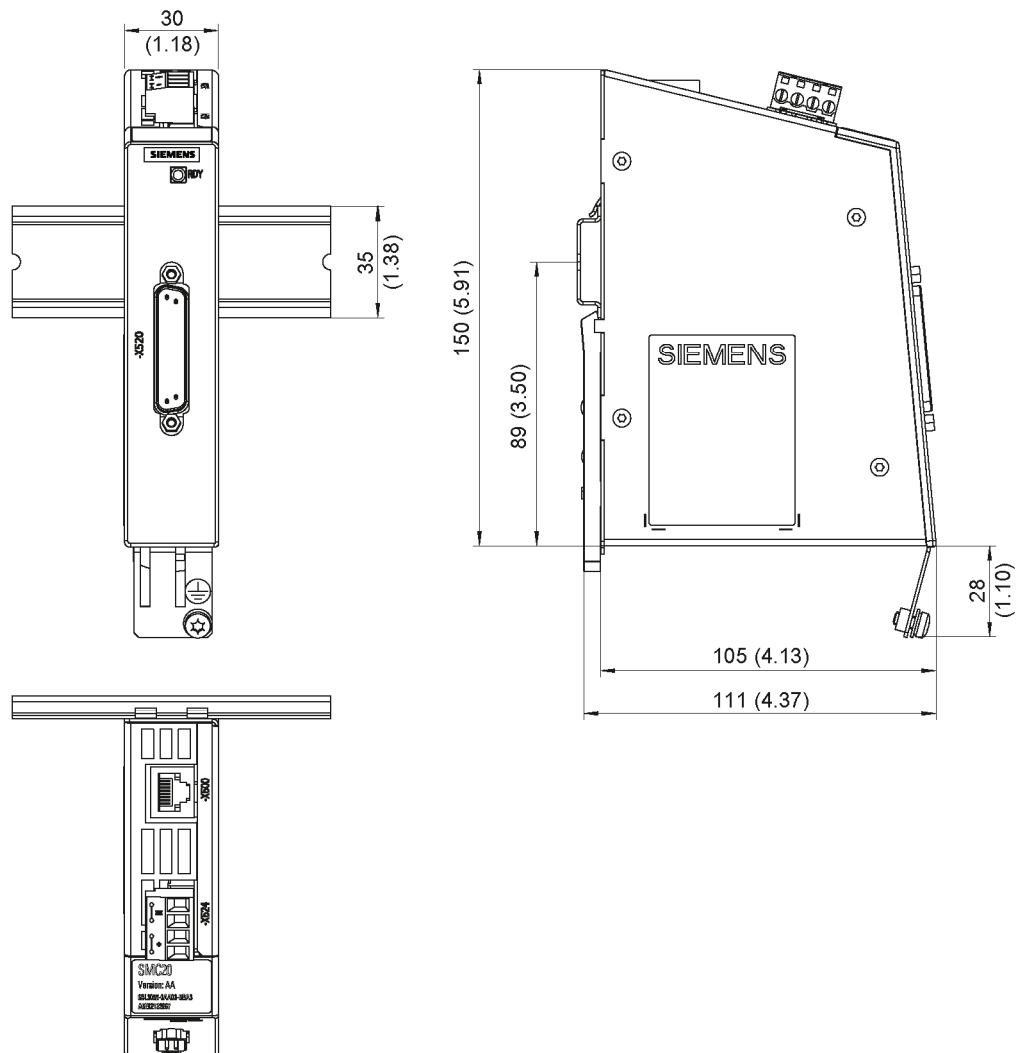


Figure 4-10 Dimension drawing of the Sensor Module Cabinet SMC20, all data in mm and (inches)


4.4.7 Installation

Installation

1. Slightly tilt the component backwards and attach it to the mounting rail using the hook.
2. Swivel the component on the mounting rail until the mounting slide at the rear audibly latches
3. Shift the components on the mounting rail to the left or right until they reach their final position

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail
2. Swivel the component towards the front and then remove it upwards from the mounting rail

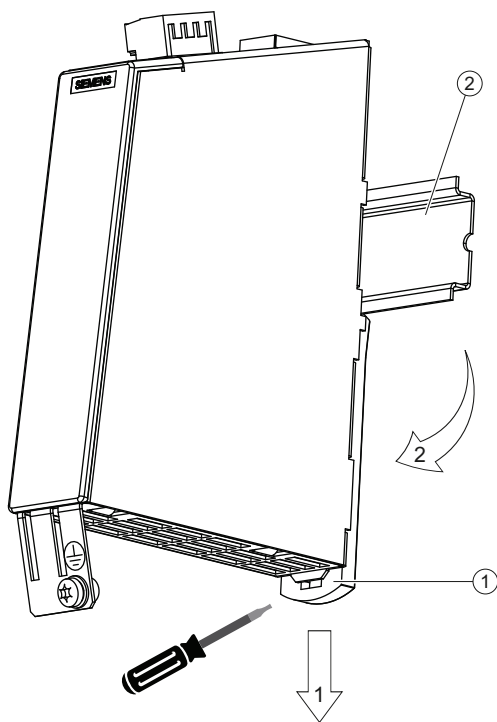

- ① Mounting slide
② Mounting rail

Figure 4-11 Removal of a component from a DIN rail

4.4.8 Technical data

Table 4- 12 Technical data

6SL3055-0AA00-5BAx	Unit	Value
Electronics power supply		
Voltage	V_{DC}	24 DC (20.4 – 28.8)
Current (without encoder system)	A_{DC}	≤ 0.20
Current (with encoder system)	A_{DC}	≤ 0.35
Power loss	W	≤ 10
Encoder system power supply		
Voltage	$V_{encoder}$	5 V DC (with Remote Sense) ¹⁾
Current	$A_{encoder}$	0.35
Encoder frequency that can be evaluated ($f_{encoder}$)	kHz	≤ 500
SSI baud rate ²⁾	kHz	100 - 250
Max. encoder cable length	m	100
PE/ground connection		At the housing with M4/1.8 Nm screw
Weight	kg	0.45
Degree of protection		IP20 or IPXXB

1) A controller compares the encoder system supply voltage - sensed via the Remote Sense cables - with the reference supply voltage of the encoder system, and adjusts the supply voltage for the encoder system at the output of the sensor module until the required supply voltage is obtained directly at the encoder system (only for 5 V encoder system power supply).

2) Only possible for SSI encoders with 5 V supply

Note

Current controller clock cycle

For a current controller clock cycle of 31.25 μ s, an SMC20 with order number 6SL3055-0AA00-5BA3 must be used.